

2.5. Synchronizing time

When the Em50 series data loggers are connected to a computer via ECH2O Utility, they automatically acquire the computer's date and time. This is a default (and recommended) setting in ECH2O Utility (Figure 11) but can be disabled using the following steps.

- Click on "Preferences" in the Edit menu
- Click on the "Application" tab
- Uncheck the "Keep ECH2O device's clock synchronized to PC clock" to disable automatic clock synchronization.

If time synchronization is disabled, the data logger's time can be updated by going to the Actions menu in ECH2O Utility and clicking on "Set Date/time". The data logger will acquire the attached devices' date and time.

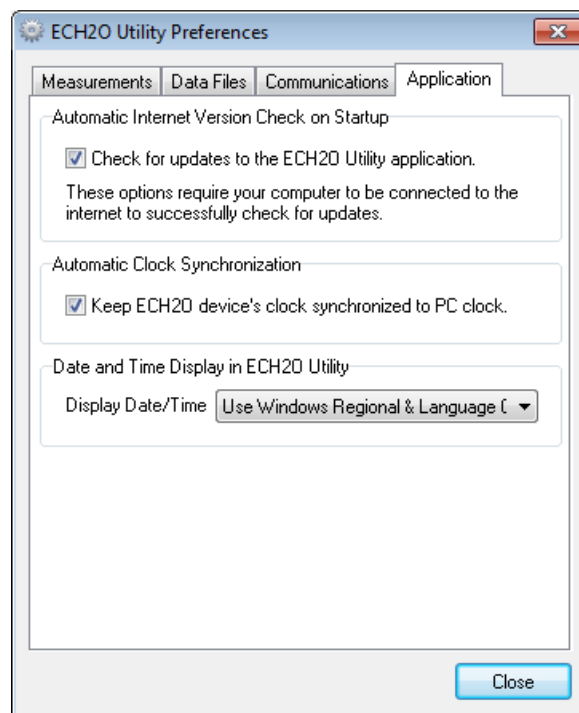


Figure 11. The ECH2O Utility preferences window has options to disable automatic clock synchronization.